

Direct Drive Manual Bass adjustable.

Controls are Volume, Tone (you can pull this knob to switch in the “fat harmonics” mode) and drive.

Volume is usually 12 o clock for a starter on the normal setting when you Pull the Tone knob try setting the volume to 10 o clock, for Tone usually 3 o clock is a good starter and drive set from 9 o clock to 12 o clock.

Here are some suggested settings, please keep in mind these are only general suggestions and your best tones will be found by experimenting and dialing in your best tone.

1. Clean drive- Vol, 12:00 Tone set to max (pull for fatter boost) and drive set between min and 7:30
2. Country rock_ vol 12:00 Tone 4:30 drive 8:00-9:00
3. light electric blues- Vol 12:00 Tone 12:00 to 4:00 (pull for electric delta setting) drive 8:30-10:00.
4. 808 killer!-12:00-2:00 tone 2:00-5:00 (pull for 808+ Tweed!) drive. 11:00-1:00.
5. Vintage Marshall- vol 12:00 tone 3:00-4:00 (pull California rhythm) drive 1:30-3:30.
6. Hot Modded Marshall + early 90's R.F.- Vol 12:00 Tone 4:00-max (pull R.F. tone) drive 3:00-max.

Functions

1. Volume adjusts overall level of the Direct Drive.
2. Tone adjusts brightness.
3. Pull engages Fat Harmonics mode for Expensive California amp tones.
4. Drive adjusts sustain and harmonics.
5. Internal trim pot adjusts bass content.

Additional notes

Always leave a battery connected to the battery snap or wrap a small piece of paper around it for insulation.

Please use a **9 volt negative tip** power supply (not included) when not using a battery (not included).

Questions? Help?

Email us at barberelectronic@hotmail.com

Or call 410-374-5101

www.barberelectronics.com

Barber Electronics
4001 Dana ave.
Hampstead, MD 21074

Thank you for purchasing the Direct Drive.