


Owner`s Manual

Thank you, and congratulations on your choice of the CHR-504 Pedal.

Panel Description

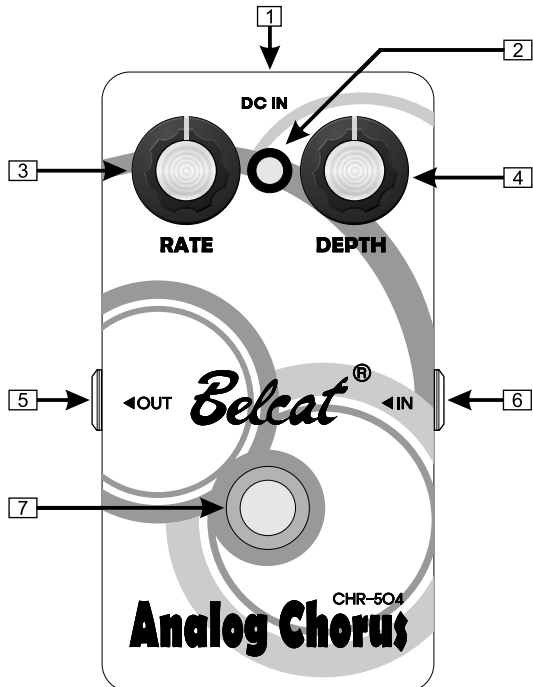

- 1 AC adapter Jack**
A terminal to connect AC adapter. Use the dedicated DC9V adapter. Improper adapter will cause damage.
- 2 LED Check**
When LED is lit, the effect is on.
Replace battery when LED becomes dim or does not light.
- 3 Rate**
Controls the amount of chorus speed.
- 4 Depth**
Controls the amount of chorus depth.
- 5 Output Jack**
Connect your amp or stomp-box to the 1/4" TS OUT connector.
- 6 Input Jack**
Connect your guitar or bass to the 1/4" TS IN connector.
When plug is inserted into jack, the power is automatically turned on.
When not in use, remove plug to conserve battery life.
- 7 Foot Switch**
Turns the effect ON/OFF.

Overview

CHR-504 analog chorus pedal, operated by a buffered bypass in steel hard case, will give you feel a fantastic classic-vintage chorus.

A clean, analog dedicated chorus pedal with clear highs and marvelous effect that is variable between the middle range.

CHR-504 chorus pedal with gorgeous-sounding will remind you how clean and cool your chorus can be.

CHR-504 will preserve your unique and clean guitar sound.

Changing the battery

Release at the 4 screws on the back side to open it.

Replace the used one with new battery.

Close the case, then lock it with 4 screws.

When the unit is not use, always remove plug from input jack for longer periods of time.

The internal battery is switched off when using the external DC adapter.

Specification

Input Connector ----- 1/4" TS
Output Connector ----- 1/4" TS
Input Impedance ----- 1 megaohms
Output Impedance ----- 1 Kohms
Rate Control ----- 1Hz ~ 10Hz
Power Connector ----- 2.5mm DC Jack

Power Supply ----- Center negative 9 VDC @ 300mA
Battery ----- 9 VDC Alkaline type 6LR61
Power Consumption --- 7.7mA
Dimension ----- W 110mm X H 60mm X D 53mm
Weight ----- 225g