



LIVE TO PLAY LIVE®



M68 UNI-VIBE® CHORUS/VIBRATO



92503016632revA

# M68 UNI-VIBE® CHORUS/VIBRATO

## DESCRIPTION


- Legendary effect in a smaller housing
- Chorus mode sounds rich, lush
- Vibrato mode delivers a deep, shimmering texture
- True bypass

## CONTROLS

- 1 SPEED knob controls sweep rate of effect
- 2 VIBE button toggles between default Chorus Mode and Vibrato Mode
- 3 LEVEL knob controls overall volume of effect
- 4 DEPTH knob controls overall intensity of effect
- 5 FOOTSWITCH toggles effect on/ bypass (white LED indicates on)

## POWER

The MXR Uni-Vibe® Chorus/ Vibrato is powered by one 9-volt battery (remove bottom plate to install), a 9-volt AC adapter such as the Dunlop ECB003/ECB003E, or a DC Brick™ power supply.

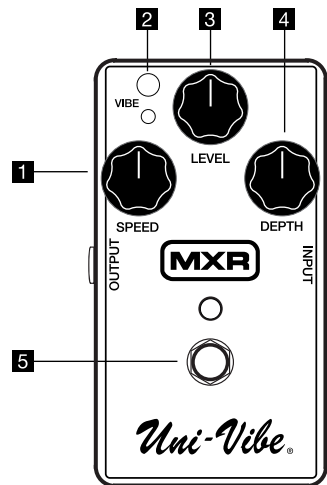


## DIRECTIONS

- Run a cable from your guitar to the Uni-Vibe's INPUT jack and run another cable from the Uni-Vibe's OUTPUT jack to your amplifier.
- Start with all controls at 12 o'clock.
- The Uni-Vibe's default setting is Chorus Mode (dry signal mixed with pitch-shifted signal). Push VIBE button to engage Vibrato Mode (pitch-shifted signal only—indicated by red LED).

- Turn the effect on by depressing the footswitch.
- Rotate LEVEL knob clockwise to increase overall volume or counterclockwise to decrease it.
- Rotate SPEED knob clockwise to increase sweep rate of effect or counterclockwise to decrease it.
- Rotate the DEPTH knob clockwise to increase intensity of effect or counterclockwise to decrease it.

## SAMPLE SETTINGS

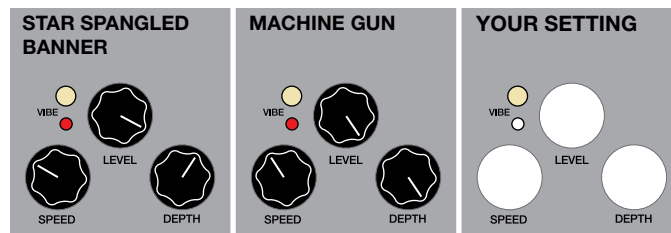

## SPECIFICATIONS

Input Impedance	1 MΩ
Output Impedance	5 kΩ
Max Input	0 dBV
Max Output	8 dBV
Noise Floor*	-94 dBV
Speed Control	0.5 Hz to 10.5 Hz
Bypass	True Hardwire
Current Draw	5 mA
Power Supply	9 volts DC

\*A-weighted, all controls at mid position



DUNLOP MANUFACTURING, INC.  
P.O. BOX 846 BENICIA, CA 94510 U.S.A.  
TEL: 1-707-745-2722 FAX: 1-707-745-2658