

LIVE TO PLAY LIVE®



JIMDUNLOP.COM

92503009393revB

MXR micro chorus

**Operation
Manual**

M148 MICRO CHORUS

DESCRIPTION

- Adds rich chorus textures, from sparkly watery shimmers to intense rotating speaker simulation
- All analog circuitry with bucket brigade technology for warm analog tone
- True bypass with LED
- Joins the ranks of MXR Classics such as the Phase 90, Dyna Comp and Micro Amp

POWER

The MXR Micro Chorus can be powered by one 9-volt battery (accessed by removing the pedal bottom plate), a 9-volt AC adapter such as the Dunlop ECB003/ECB003E, or a DC Brick™ power supply.

CONTROLS

- RATE knob adjusts the speed of the chorus effect.
- FOOTSWITCH toggles effect on/ bypass (red LED indicates on)

DIRECTIONS

- Run a cable from your guitar to the Micro Chorus' INPUT jack and run another cable from the Micro Chorus' OUTPUT jack to your amplifier.
- Turn the Micro Chorus effect on by depressing the footswitch; the red LED will illuminate, indicating that the effect is activated.
- Turn the RATE knob clockwise to increase the chorus speed towards a watery shimmer, counterclockwise for a slower rotating sound.

SAMPLE SETTINGS

"GRUNGE AS YOU ARE"
CLASSIC 90's



RATE

"CALIFORNICHORUS"
ALTERNATIVE-POP



RATE

"BLACK 2 FADE"
METAL BALLAD



RATE

SPECIFICATIONS

Input Impedance	1 MΩ
Output Impedance	1 kΩ, 1 kHz
Max Input Level	-5 dBV, 500Hz
Max Output Level	+8 dBV
Rate Control	0.25 Hz, 7.5 Hz
Noise Floor*	-89 dBV
Delay Time	4.2 ms, 6.8 ms
Frequency Response	
Delayed Signal	20 Hz to 4.5 kHz
Dry Signal	20 Hz to 20 kHz
Bypass	True Hardwire
Current Draw	5 mA
Power Supply	9 volt DC

**A-weighted, Rate control full counterclockwise*

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

