

electro-harmonix

Deluxe Memory Man ANALOG DELAY WITH CHORUS/VIBRATO

- OPERATING INSTRUCTIONS -

****IMPORTANT WARNING!****

**** If your unit has a 3 prong power cord, it must be plugged into a grounded (3 prong) AC outlet. DO NOT DEFEAT THE GROUND ON THIS DEVICE!! If there is a failure within the unit, the ground connection is your only protection against dangerous voltages! ****

If your unit came with an external power adaptor, use only this supplied power pack. Using the wrong power adaptor may damage your unit and void your warranty.

Your **Deluxe Memory Man with chorus/vibrato** is designed with state-of-the-art solid state circuitry to give you years of high quality, trouble-free performance.

Connect your guitar to the **INPUT** jack, and the **OUTPUT** jack into the input of your amp. Your Memory Man can be used in combination with other effects devices – experiment to develop your own unique sound. The bypass footswitch on top of the unit allows you to switch the effect in and out. Unmodified signal is always available at the **DIRECT OUT** jack. Set the **LEVEL** control so that the **OVERLOAD LED** blinks on with the loudest notes you play, but does not come on very brightly or too frequently. Overdriving the unit will cause distortion.

The **BLEND** control allows you to vary the mix of direct and delayed signals; it is set to the center position equal levels of both. **FEEDBACK** provides delay repeats, or multiple echoes. If set very high, runaway oscillation will occur. Fairly high feedback with short delay settings produces a reverb effect.

The **DELAY** control determines the time between direct and delayed signals, and between the repeats when feedback is used. Strange, eerie and unusual pitch-shift effects can be produced by changing the delay while playing, especially while using feedback.

The **CHORUS/VIBRATO** control introduces a modulation in the delay time: slow for chorus, faster for vibrato. This produces a "Doppler" pitch shifting in the delayed signal. A rich, vibrant chorus effect is produced with the switch set to **CHORUS**, delay fairly short, blend at the center, chorus set high, and feedback fairly high. When you determine the control settings for your favorite effects, make note of them so you can quickly set up the unit before playing.

Unplug after use. Avoid operating near moisture. Rock-n-Roll!

- WARRANTY INFORMATION -

Please complete and return the enclosed warranty card within 10 days of purchase. We will repair the unit for free within one year of date of purchase. If you should need to return your unit for service within the warranty period, please include a brief description of the problem as well as you name, address, telephone number, copy of your receipt, and a check or money order for \$5.00 shipping and handling to:

Electro-Harmonix
C/O New Sensor Corporation
32-33 47th Avenue
Long Island City, NY 11101
Att: Service Department

Please make checks/money orders payable to New Sensor Corporation.

To hear demos by rock stars on all EH pedals visit us on the web at www.ehx.com.
Email us at info@ehx.com

