



DiscumBOBulator ©

SENSITIVITY This controls the level at which the envelope filter is triggered.

UP/DOWN SWITCH In the **UP** position the pedal functions as a normal envelope filter with a characteristic auto wah sound. In the **DOWN** position this action is reversed, resulting in a more aggressive sound.

WIDTH This control is used to change the bandwidth of the filter, in order to mimic different kinds of wah pedals. Low Q turn left, high Q turn right. Normally this control would be used in this range. 

ATTACK This control is used to adjust how fast the envelope changes. For fast playing the range would be set at 100%-turned right. To mimic wah pedals, when used on guitar with distortion, the range would normally lie in this area. 


POWER REQUIREMENTS the pedal uses a standard 9V battery located inside. Or you can use a 9V DC external power supply with a 2.1mm DC plug. Center is negativ (-).

EMMA
electronic ©


email: info@orkestergraven.dk

Sample settings


"FAST & THICK"

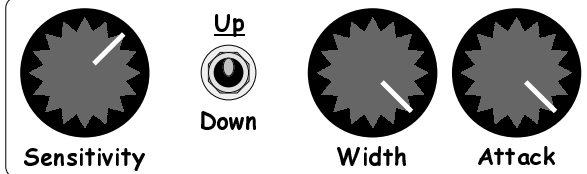

"SLOW & STEADY"

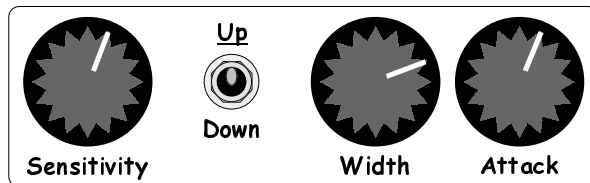

"CLICKIN' B3"

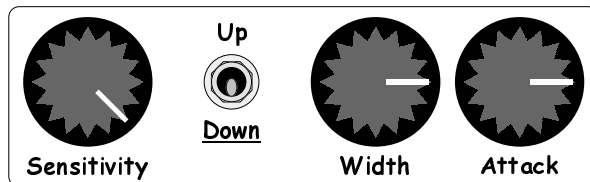

"SOMETHING ELSE"

