



OCTAVE REVERB

CONTROLS

VERB - Controls the amount of reverb. Left is less, right is more.

OCTAVE - Allows you to blend the octave amount in the reverb. Left is mild, right is more extreme.

DECAY - Controls the length of the reverb trail. Left is shorter, right is longer.

UP/DOWN - Selects if the reverb octave is one octave up or down.

JACKS

INPUT - 1/4" jack on the right side of the pedal.

OUTPUT - 1/4" jack on the left side of the pedal.

POWER - Requires 9V DC negative center power and consumes 70mA. Do not use more than 9V DC. You will void your warranty.