



TWIN TWELVE V2

For the first time ever, the legendary tones of the Silvertone 1484 amplifier are at your feet. Rich preamp/overdrive tones with a unique voice and character not found in any other pedal on the market.

CONTROLS

VOLUME - Controls the output volume. Left is less, right is more.

DRIVE - Controls the amount of drive or gain just like a tube amp being cranked at high volumes. Left is less, right is more.

BASS - This is an active bass control just like the one you would find on the classic amp, modified for a more usable sweep. Left is less, right is more

TREBLE - Active treble control just like the amp. Left is less, right is more.

CLEAN/DIRT TOGGLE - Switches between clean preamp boost and overdrive mode. The LED is blue when in Clean mode and is red to indicate you are in the Dirt mode. The Drive control is disengaged when in Clean mode.

JACKS

RED REMOTE JACK - The upper jack on the right side of the pedal is for a JHS "Red Remote" switch. Using this switch you can toggle between the Clean mode and the Dirt mode on the fly.

INPUT - Lower ¼" jack on the right side of the pedal.

OUTPUT - ¼" jack on the left side of the pedal.

POWER - Uses 9V DC Negative Center. The Twin Twelve is internally charged to 18V. Do not use more than 9V DC. Your warranty will be voided. 34mA consumption.

JHS PEDALS