


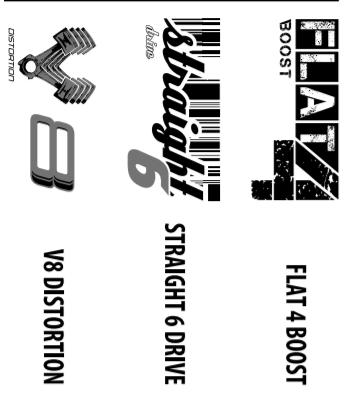

**Tone Garage**  
Owner's Manual  
Manuel d'utilisation  
Bedienungsanleitung  
Manual de Usuario  
取扱説明書



(1) (2) (3) (4) (5)

**REMARQUE IMPORTANTE POUR LES CLIENTS**  
Ce produit a été fabriqué suivant des spécifications sévères et des besoins en tension applicables dans le pays où ce produit doit être utilisé. Si vous avez acheté ce produit via l'internet, par vente par correspondance ou/et vente par téléphone, vous devez vérifier que ce produit est bien utilisable dans le pays où vous résidez.

ATTENTION: L'utilisation de ce produit dans un pays autre que celui pour lequel il a été conçu peut être dangereuse et annulera la garantie du fabricant ou du distributeur. Conservez bien votre récépissé qui est la preuve de votre achat, faute de quoi votre produit ne risque de ne plus être couvert par la garantie du fabricant ou du distributeur.

#### Precautions

- Location:** Using the unit in the following locations can result in a malfunction.
  - In direct sunlight
  - Locations of extreme temperature or humidity
  - Excessively dusty or dirty locations
  - Locations of excessive vibration
  - Close to magnetic fields

#### Power supply

- Please connect the designated AC adapter to an AC outlet of the correct voltage. Do not connect it to an AC outlet of voltage other than that for which your unit is intended.

#### Interference with other electrical devices

- Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

#### Handling

- To avoid breakage, do not apply excessive force to the switches or controls.

#### Care

- If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds or flammable polishes.

#### Keep this manual

- After reading this manual, please keep it for later reference.

#### Keeping foreign matter out of your equipment

- Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock.
- Be careful not to let metal objects get into the equipment. If something does slip into the equipment, unplug the AC adapter from the wall outlet. Then contact your nearest VOX dealer or the store where the equipment was purchased.

#### THE FCC REGULATION WARNING (for USA)


- NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase or relocate the receiving antenna.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
  - If items such as cables are included with this equipment, you must use those included items.
  - Unauthorized changes or modification to this system can void the user's authority to operate this equipment.
- What is Hi-Volt?**
- VOX reveals new vacuum tube circuit technology. This new technology is called "Hi-Volt", this delivers high voltage to a 12AX7 vacuum tube, by using 6x AA batteries or DC9V power supply. "Hi-Volt" delivers 200V to a 12AX7 tube stage. The discrete circuit also works at high voltage operation (20V). The result is a natural and dynamic sound like a vacuum tube amplifier.
- Unprecedented analog circuit design**
- This series of pedals have an original and unique analog circuit, that has not been seen in the stomp box market before.
- LOW, HIGH:** When they are dialed to 120°c, the frequency response is almost flat. Adjust them to create a full range booster. When LOW is dialed lower, it can be used as a treble booster. When both HIGH and LOW are dialed lower, it can be used as a mid booster.
- GAIN:** Use this to adjust the gain. When it is dialed over 120°c, both lower and higher frequencies roll off. You can dial in anything from a wider range rhythm guitar sound, to a mid ranger lead guitar sound.
- MID-SHIFT:** This changes the EQ shape of the mid range in front of the tube stage. When off the tone is more biting, good for British crunch. When on, the mid range will shift, enabling perfect tone for a lead guitar sound.
- MID-BOOST:** This boosts the mid range only.

#### Notice regarding disposal (for EU)

When this "crossed-out wheeled bin" symbol is displayed on the product, owner's manual, battery, or battery package, it signifies that when you wish to dispose of this product, manual, package or battery you must do so in an approved manner. Do not discard this product, manual, package or battery along with ordinary household waste. Disposing in the correct manner will prevent harm to human health and potential damage to the environment. Since the correct method of disposal will depend on the applicable laws and regulations in your locality, please contact your local administrative body for details. If the battery contains heavy metals in excess of the regulated amount, a chemical symbol is displayed below the "crossed-out wheeled bin" symbol on the battery or battery package.

\* All product names and company names are the trademarks or registered trademarks of their respective owners.

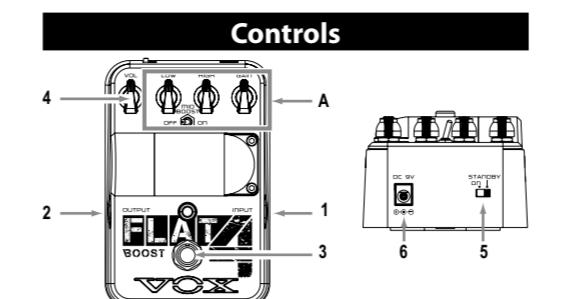

**1. INPUT:** Connect your guitar to this jack.

**2. OUTPUT:** Connect this jack to your guitar amp.

**3. EFFECT (Bypass):**  
Press this switch to alternate between the EFFECT and BY-PASS.

LED On: EFFECT  
LED Off: BYPASS

**4. VOLUME:** This controls the overall volume (output) of the pedal.


**5. ON/STANDBY Switch:** This turns the power on/off.

**6. DC9V:** Connect the separately sold AC adapter (DC9V) here.

#### STRAIGHT 6 DRIVE

This pedal captures the British invasion sound.

**A**

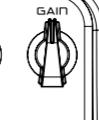


**BASS:** Use this to adjust the lower frequency range.  
**TONE:** Use this to adjust the upper mid to higher frequency range.

**GAIN:** Use this to adjust the gain. When it is dialed over 120°c, both lower and higher frequencies roll off. When dialed around MAX, you can obtain a thick lead guitar sound.

**BRIGHT:** This boosts the brightness in front of the tube stage. You can obtain a British guitar amplifier sound even if you use dark humbucker pickups.

#### V8 DISTORTION

This pedal features high-gain distortion optimal for heavy riffs and solos.

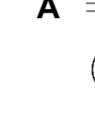

**BASS:** Use this to adjust the lower frequency range.  
**TONE:** Use this to adjust the upper mid to higher frequency range.

**GAIN:** Use this to adjust the gain. When it is dialed over 120°c, both lower and higher frequencies roll off. You can dial in anything from a wider range rhythm guitar sound, to a mid ranger lead guitar sound.

**MID-SHIFT:** This changes the EQ shape of the mid range in front of the tube stage. When off the tone is more biting, good for British crunch. When on, the mid range will shift, enabling perfect tone for a lead guitar sound.

#### FLAT 4 BOOST

This pedal has all the features you demand from a booster.



**BASS:** Use this to adjust the lower frequency range.  
**TONE:** Use this to adjust the upper mid to higher frequency range.

**GAIN:** Use this to adjust the gain. When it is dialed over 120°c, both lower and higher frequencies roll off. You can dial in anything from a wider range rhythm guitar sound, to a mid ranger lead guitar sound.

**MID-BOOST:** This boosts the mid range only.

#### Installing the battery

##### Battery Operation


When the batteries begin to run down, the Effect LED will become dimmer. Replace the batteries in the compartment located on the bottom of the pedal. If the batteries run down completely, the effect will not operate. Replace immediately, you can't let your fans down.

##### Battery Installation

If you plan on not using the pedal for an extended period of time, (we'll assume you are on a holiday, otherwise why wouldn't you be using it?) remove the batteries to avoid damage caused by leakage.

- Open the battery cover that's located on the bottom.


- Attach the batteries to the battery clip, making sure that the polarity is correct.

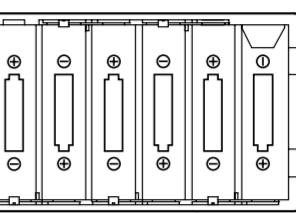

- Observe the correct polarity and use AA size alkaline batteries only.

- Install the batteries and close the cover.

#### Connections

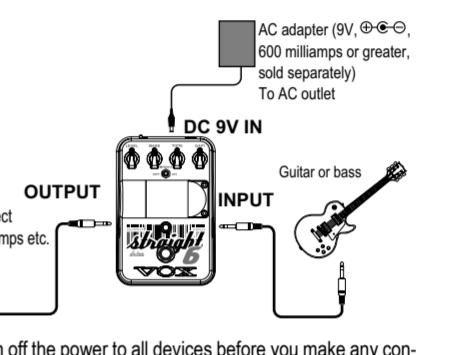

**NOTICE:** Turn off the power to all devices before you make any connections to avoid damaging your equipment.

**If you are using an optional AC adapter:**  
If you use an optional AC adapter for power, be sure that it is 9 volt (DC) and at least 600 mA.

**Using an AC adapter other than what Vox recommends may cause a malfunction or damage.**

#### Using the Pedal?

**1.** Connect your guitar to the INPUT jack, and turn the power switch on.

**2.** Connect the OUTPUT jack to your guitar amp.

**3.** Before doing so, turn the volume on your amp down. Your speakers and ears will thank you.

**4.** Pressing the EFFECT switch alternates between effect on and bypass.

**5.** Tone Garage pedals are True Bypass so when the effect is not on, your signal remains unchanged.

**6.** VOLUME knob controls the overall volume (output) of the pedal.

**7.** You won't hear sound for several tens of seconds while the valve warms up.

#### Specifications

**Input /Output impedance :**  
1M-ohms / 2.2k-ohms

**Connections :**  
INPUT jack (guitar input), OUTPUT jack (line output), DC 9V jack

**Power supply :**  
Six LR6(AA size) alkaline batteries or AC adapter (9 V, 9V, 600 millamps or greater)

**Battery life :**  
7 hours of continuous use

**Dimensions (W x D x H):**  
87mm x 132mm x 63mm / 3.43" x 5.20" x 2.48" (including rubber feet)

**Weight (Distortion, Overdrive, Booster) :**  
420 g / 14.81 oz. (not including batteries)

**Included items :**  
Owners manual, Six LR6(AA size) alkaline batteries

**Options (sold separately):**  
AC adapter (9V, 9V, 600 millamps)

\* Appearance and specifications are subject to change without notice for improvement.

